

## **Filter Cleaning Instructions**

## SERVICING YOUR JETEX AIR FILTER

1. Remove the filter from the air-box.

2. Using a brush or a vacuum cleaner (on a low setting), remove any loose dirt/debris.

3. Wet the filter lightly with cold water.

4. Fill a shallow dish with JETEX CLEANING SOLUTION.

5. Roll or dip the filter in the solution and allow to stand for 15 minutes in order to dissolve the remaining dirt/debris.


6. Rinse the filter with warm (not hot) water from inside to out.

7. Allow the filter to dry NATURALLY. Do not use a hairdryer or other extreme heat source.

8. Lightly spray the filter with JETEX FILTER OIL until an even blue colour is achieved.

9. Use an absorbant cloth to take up any excess oil.

10. Refit your Jetex filter.

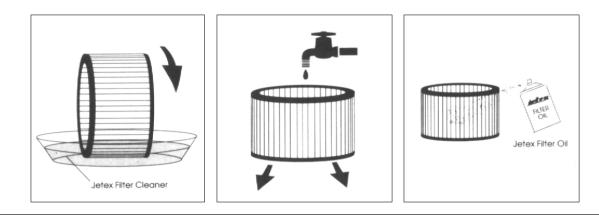

DO NOT USE PETROL, DIESEL, HIGH AIR PRESSURE OR CLEANING SOLVENTS AS THESE WILL DAMAGE THE COTTON.

Jetex Exhausts Ltd | Unit 25 The Waterways | Stratford-upon-Avon | Warwickshire | CV37 0AW Tel: +44 (0) 1789 298989 | Fax: +44 (0) 1789 414463 | sales@jetex.co.uk | www.jetex.co.uk